
 
Package contents (parts are not to scale):

Α

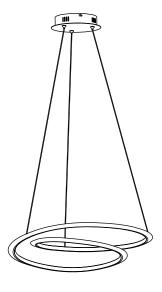



Part	Description	Quantity
А	Fixture body with wire	1
В	Wall expansion particle	2
С	Self-Tapping screw	2

Light source

Max. LED 43W 1820Lumen 3000K (Dimmable)

Care and Cleaning

EXTERIOR MAINTENANCE

- 1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- 2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.




INSTRUCTIONS MANUAL

for TWISTER

INTERIOR PENDANT

Art Nr. 54604-055-71

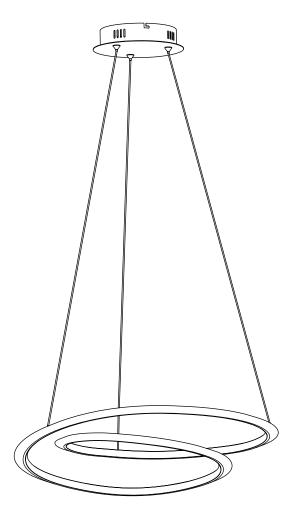


www.lampehuset.no

Pre-Installation

PLANNING THE INSTALLATION


Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

TOOLS REQUIRED

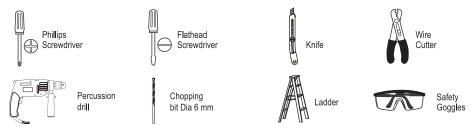


Installation (Make sure to turn off the main power)


Step 1.

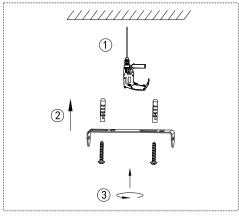


Step 2.

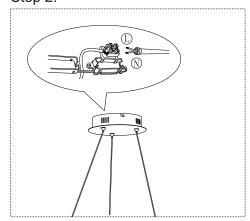


Step 3.

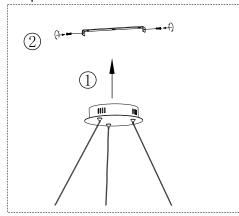

Step 4.

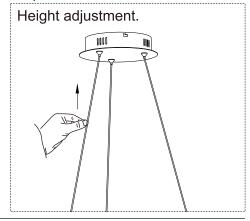

Installation (continued)

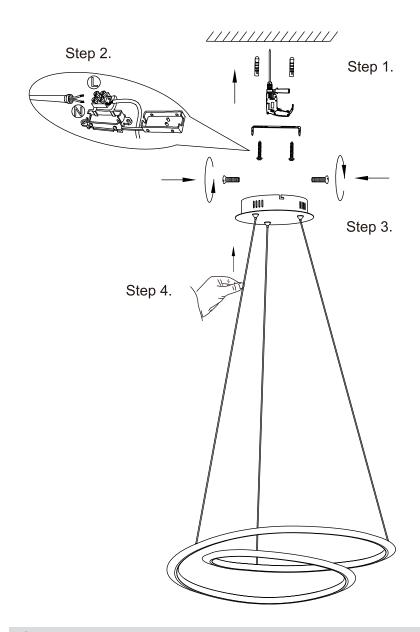

Operation

- ☐ Turn on power at the circuit breaker or fuse box.
- Turn the light switch on to activate the fixture.