


# READ Battery lamp 5705639736775



Don't bend the gooseneck excessively to avoid damage.  
Bøj ikke flexarmen for kraftigt, for at undgå, at den beskadiges

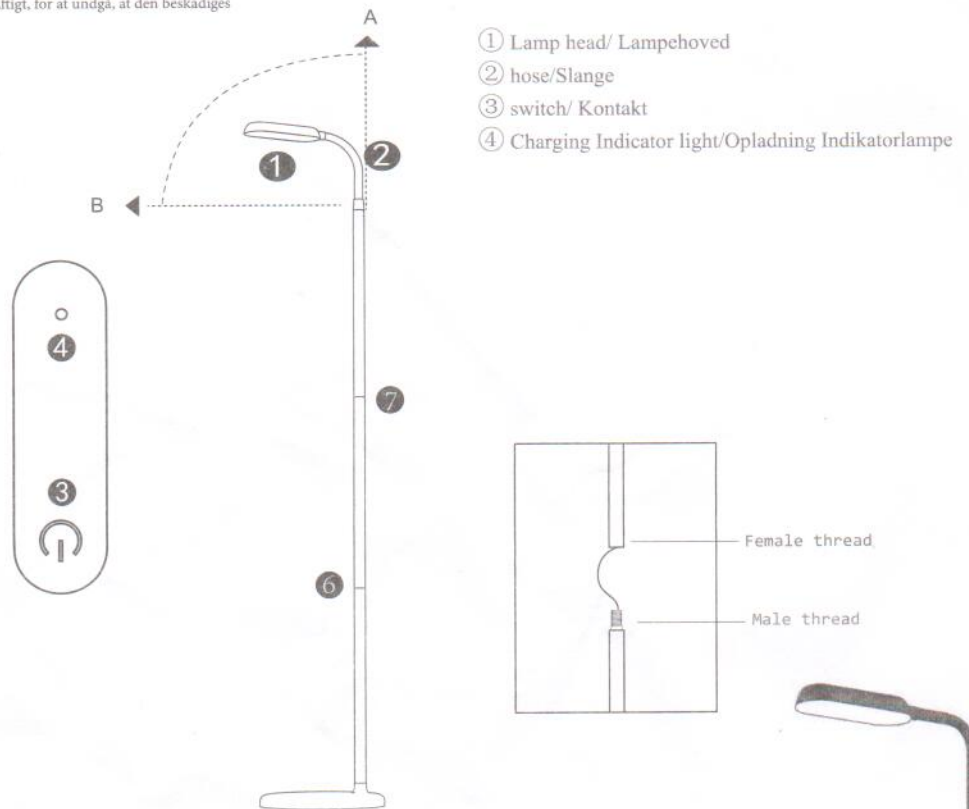

## Samle anvisning

1: Fjern plastik pakningerne fra rørene

2: Saml først ⑥ og tag det overskydende kabel ind i røret, skru herefter rørene sammen

3: Saml derefter ⑦ og gør som i pkt 2

Lampen tændes ved at trykke på lampehusets icon og dæmpes ved at trykke kortvarigt

nede ③

Farvetemperaturen justeres ved at trykke kortvarigt på ③

Denne lampe er til indendørs brug, men kan bruges udenfor i "battery mode".  
Produktet er ikke vandtæt eller egnet til brug i fugtige omgivelser.

\* Battery mode : Uden 230V adaptor

## Instruction manual

1: Take off the protection plug of the tubes

2: Assembly ⑥ and put the spare cable into the tube, rotate the tubes to connect

3: Assembly ⑦ and do the same as in point 2

The lamp is being switched on/ off by touching the lamp head and dimmed by

holding the bottom ③

The color of the light is being adjusted by keep touching the lamp head ③

This lamp is for indoor use, but can be brought outside in "battery mode \*\*".  
The lamp is not waterproof or suitable for use in humid surroundings.

\* Battery mode : Without power supply